



Silent Gliss®

1200 Hand Drawn Curtain Track Fitting Instructions


Congratulations on your purchase! Correctly fitted, your curtain track will give you many years of efficient use.

Face Fix or Top Fix with bracket 3175


Brackets should be spaced evenly at no more than 50cm (20") intervals.

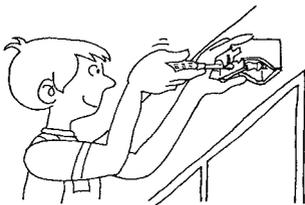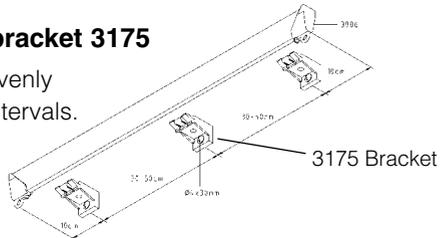

Firmly screw **3175** brackets to wall or ceiling. The two outside brackets should be located 10cm (4") in from the ends of track so as not to coincide with end covers. Remaining brackets should be equally spaced along track (approx. every 30-50cm/12"-20').

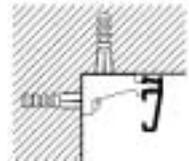


Screw for wall or ceiling with universal bracket.

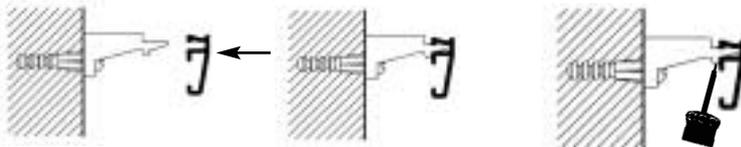

To fit the track, simply push on as shown.

To remove the track, insert screwdriver as shown and twist.

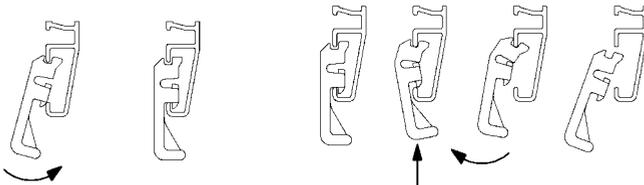


Gliders can be easily added or removed.

P.T.O. These instructions are continued on reverse side.

If you need to shorten your track...

Unscrew and remove endcover and slide gliders to the other end.

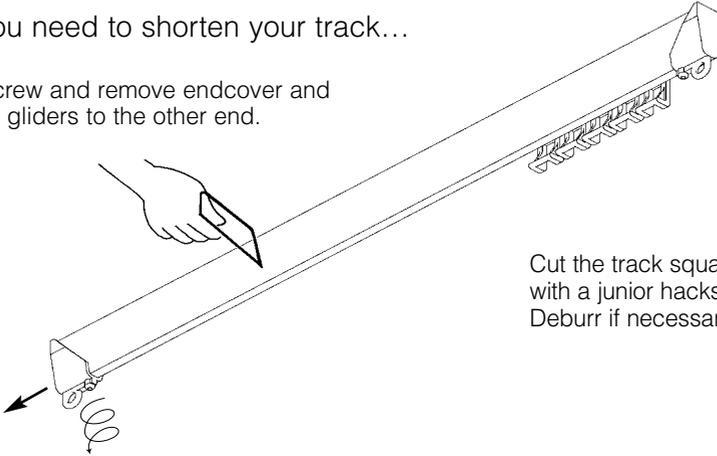


Cut the track squarely with a junior hacksaw. Deburr if necessary.

Extras/Accessories (not supplied)

A wide range of accessories is available for this most versatile curtain track. ask your dealer.


Fixed extension brackets.

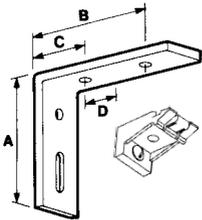

| | A | B | C |
|-------------|----|-------|-------|
| 3134 | 50 | 51.5 | - |
| 3135 | 50 | 71.5 | 21.5 |
| 3136 | 50 | 91.5 | 41.5 |
| 3137 | 80 | 111.5 | 61.5 |
| 3138 | 80 | 141.5 | 91.5 |
| 3139 | 80 | 191.5 | 141.5 |
| 3239 | 70 | 150.0 | 130.0 |

(Dimensions in mm)

Adjustable extension brackets.

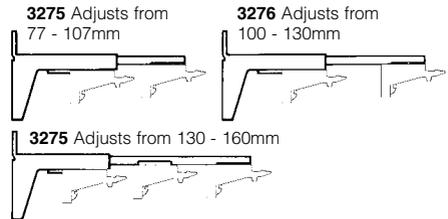


Up to 3 tracks can be located on the same extension bracket or a pelmet formed around your existing track.




3942
Endstop/
Intermediate
stop




3176
Ceiling fix
bracket

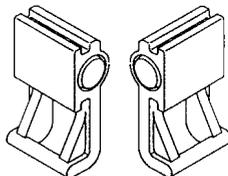

3947
Pair of
magnetic
gliders

 

 3113/3115
Double ceiling
fix spacer
bracket



4092
Plastic
draw rod
4092S
Aluminium
draw rod

THIS TRACK CANNOT BE BENT AT HOME.

Silent Gliss Limited

Star Lane, Margate, Kent CT9 4EF, England
Telephone: 01843 863571 Fax: 01843 864503
E-mail: info@silentgliss.co.uk www.silentgliss.co.uk

