



Wood Curtain Pole

FITTING INSTRUCTIONS

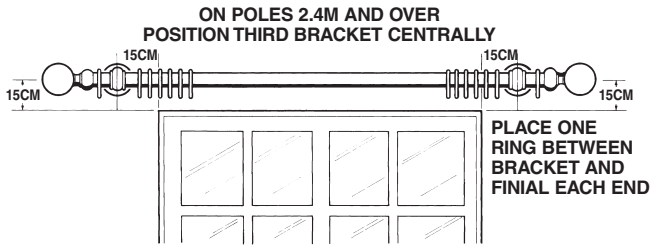


1. Push your selected finials on to the pole and place against the window to see if it needs cutting to size.

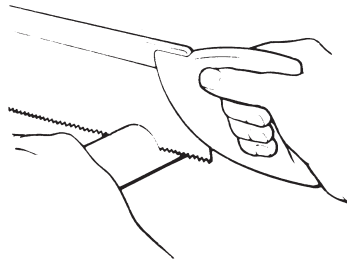


Important for two part poles - cut equal amounts from both poles so that the join remains central. (Pilot holes for the finials or centre screw will need to be redrilled).


2. Mark the wall for positioning of the back plates - they should be approx 15cm in from the end of the pole. Drill and insert rawlplugs.

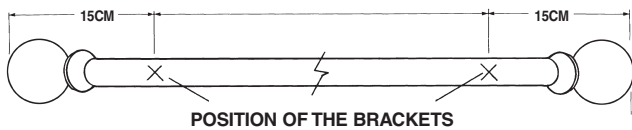


3. Remove back plate from the bracket base and fix back plate to wall with screws.

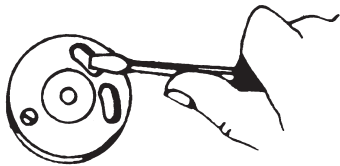


Screw the bracket to the plate.

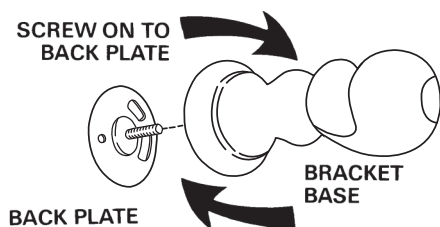


4. Place the rings, bracket heads and finials on to the pole.

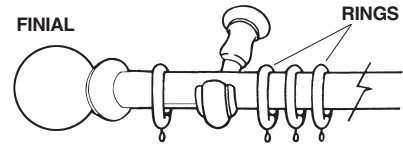


Two part poles should be joined together using double ended screws.

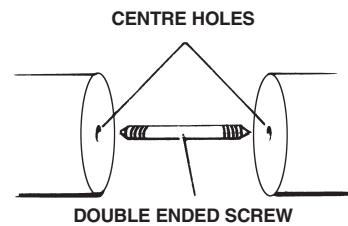

5. Place the pole onto the bracket, keep one ring in between the bracket and finial each end and check the pole is level.

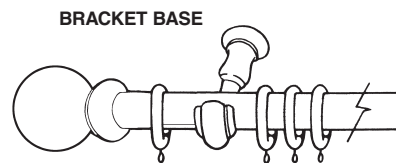

If not you can adjust the back plate by rotating it clockwise or anti-clockwise.

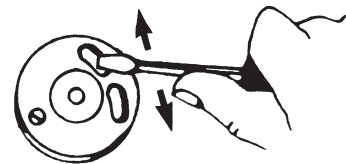

6. Put the pole back on to the brackets and place the wood screws into each bracket base and bracket head to secure to pole.

