


2012

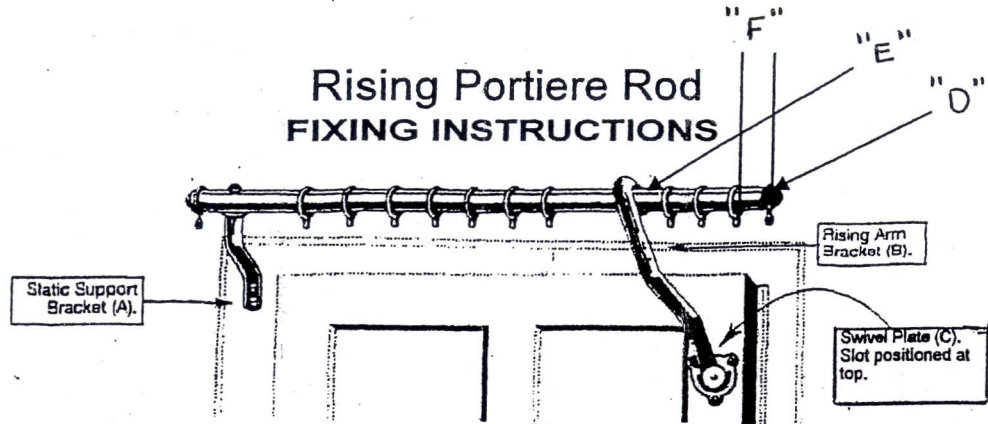

1. This Portiere Rod can be used whichever way the door is hinged.
2. Fix Support Bracket (A) to top of the door frame on hinged side of the door, with the top screw hole in the bracket should be in line with the top of the door.
3. Assemble the rising arm (B) to the rod, using the hole nearest the centre of the rod, with the nut and bolt provided.
4. Slide seven rings onto the longer end of the rod.
5. Attach the rod to the fixed bracket (A) and with the door closed, screw the swivel plate (C) of the rising arm to the door as shown. Make sure that the slot in the swivel plate is centred at the top and the rod is horizontal.
6. Slide remaining rings on to the rod and insert the end plugs.
7. Rods can be cut down to required size. Simply remove end plug (D) and cut using a hacksaw. Be careful not to cut past the fixing hole for rising arm (E). Slide on the rings and replace end plug. Ideally the portiere rod should not be cut 1" (25mm) longer than the actual door width (F) to prevent draughts and heat escaping.